

SmartServer IoT Hardware Guide

This section describes the SmartServer IoT hardware, provides hardware setup instructions, and contains the following topics:

- [SmartServer IoT Hardware](#)
 - [Using the SmartServer Connectors](#)
 - [Using the LEDs and Buttons](#)
 - [SmartServer IoT Specifications](#)
 - [SmartServer IoT Regulatory Compliance Statements](#)
- [U60 FT and TP-1250 USB Network Interface Modules](#)
 - [Using the U60 Connectors](#)
 - [Using the U60 LEDs and Buttons](#)
 - [U60 Specifications](#)
 - [U60 Regulatory Compliance Statements](#)
- [U70 PL-20 USB Network Interface Module](#)
 - [Using the U70 Connectors](#)
 - [Using the U70 PL-20 LEDs and Buttons](#)
 - [U70 PL-20 Specifications](#)
 - [U70 PL-20 Regulatory Compliance Statements](#)
- [IOX I/O Expansion Module](#)
 - [Using the IOX Connectors](#)
 - [Using the IOX LEDs and Buttons](#)
 - [IOX Specifications](#)
 - [IOX Regulatory Compliance Statements](#)