

# Using the U60 LEDs and Buttons

## Using the LEDs

The LEDs on the U60 provide an indication of its status and operation. The U60 has the LEDs:

Label	Name	Description
Service	Service	The <b>Service</b> LED indicates the network status of the U60.
Rx	Receive	The <b>Rx</b> LED indicates packets being received.
Tx	Transmit	The <b>Tx</b> LED indicates packets being transmitted.