

Using the U60 LEDs and Buttons

Using the LEDs

The LEDs on the U60 provide an indication of its status and operation. The U60 has the LEDs:

Label	Name	Description
Service	Service	The Service LED indicates the network status of the U60.
Rx	Receive	The Rx LED indicates packets being received.
Tx	Transmit	The Tx LED indicates packets being transmitted.